


City Utilities Design Standards Manual

## TEMPORARY INLET PROTECTION STONE BAGS - SLOPE GRADIENT WITH CURB


Created: January 11, 2012

Revised: January 19, 2017

Scale: N.T.S.

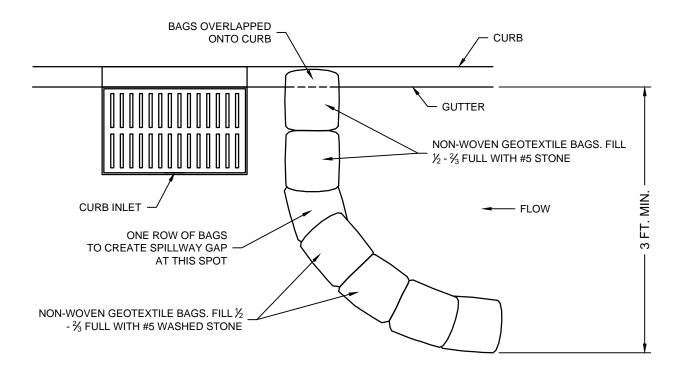

**PLAN VIEW** 

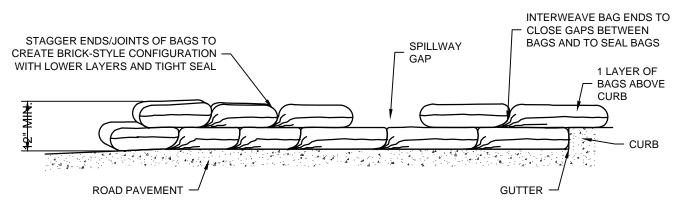

**ELEVATION VIEW** 

## NOTES:

1. REMOVE INLET PROTECTION WHEN THE CONTRIBUTING DRAINAGE AREAS HAVE BEEN STABILIZED.